

PROFESSIONAL AUDIO SYSTEM

SP218



OPERATING MANUAL

Ver. SP218-EN-1.0

NOTICE:

LSS products are manufactured for use according to proper procedures by a qualified operator and only for the purposes described in this manual. The following conventions are used to indicate and classify precautions in this manual. Always heed the information provided with them. Failure to heed precautions can result in injury to people or damage to property.

© LSS, 2014

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form, or by any means, mechanical, electronic, photocopying, recording, or otherwise, without the prior written permission of LSS.

No patent liability is assumed with respect to the use of the information contained herein. Moreover, because LSS is constantly

striving to improve its high-quality products, the information contained in this manual is subject to change without notice. Every precaution has been taken in the preparation of this manual. Nevertheless, LSS assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained in this publication.



SUMMARY

| INTRODUCTION | 4 |
|--------------------------|----|
| SAFETY AND WARNING | 5 |
| APPLICATION | 6 |
| PHYSICAL DESCRIPTION | 6 |
| TECHNICAL SPECIFICATIONS | 7 |
| INSTALLATION AND WIRING | 8 |
| WEEE DIRECTIVE | 10 |
| DIMENSIONS | 11 |
| NOTES | 12 |

INTRODUCTION

Congratulation on the purchase of your new LSS loudspeaker.

Quality innovation and versatility, this is a summary of the new system developed by LSS for professional sound users.

LSS produces professional audio products – the result of exceptional engineering and meticulous craftsmanship.

This manual is intended for use with LSS loudspeaker. This includes: safety precautions; installation, set-up and operating instruction.

Please read this manual plus any accompanying manual and follow all relevant precautions and instructions. This should allow you to obtain the maximum performance from your new loudspeaker.

Where there are conflicts or overlaps, the information in any accompanying manual supersedes the information in this manual.



SAFETY AND WARNING

IMPORTANT! SAFETY WARNING!

In the interest of their own and others' safety and to prevent voiding the warranty, we recommend a careful reading of this section before using the product.

- This product was designed and manufactured to be used as a speaker system in the context of a typical sound reinforcement system.

The use for any purpose other than these is not provided by the manufacturer and is therefore under the direct responsibility of the user / installer.

- This device complies with class I (must be connected to the outlet with a protective earthing connection).





TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER SERVICEBLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE

TO AVOID THE RISK OF FIRE AND / OR ELECTRIC SHOCK*:

- Do not expose this system to rain or moisture. Do not expose the apparatus to dripping or splashing water. Do not place objects filled with liquids, such as drinks, on the apparatus.
- Before connecting the system, be sure the mains voltage corresponds to that stated on the product.
- Connect this appliance to a power outlet with earth contact, according to national security force, via a power cable of adequate section ends with a plug or connector that meets the applicable safety regulations.
- The unit is connected to the network even when the power switch is in position '0' (OFF). Before any maintenance, disconnect the power cable from the outlet.

IMPORTANT! SAFETY PRECAUTIONS!

Read This First.

Read and heed all warnings and safety instructions in this Manual before using the

Failure to follow all precautions can result in equipment damage and / or personal injury.

- 1. Read these instructions.
- 2. Keep these instructions
- Heed all warnings and follow all instructions.
- 4. Use only attachments/accessories specified by the manufacturer.
- 5. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 6. Refer all servicing to gualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 7. LSS loudspeakers can produce sound levels capable of causing permanent hearing damage from prolonged exposure. The higher the sound level, the less exposure needed to cause such damage

CAUTION: This product is energized as long as it is connected to the AC.

CAUTION: Allow at least six inches of free space all around the amplifier for sufficient ventilation

^{*}Risk of electric shock only for self-powered system.

SP218


APPLICATION

LSS SP218 is a passive two ways speaker. SP218 uses a 160 mm (6") mid woofer with neodymium magnet and voice coil from 44 mm (1,75"). The driver from 25 mm (1") of Mylar on a rotable 90° X 40° ABS horn. SP218 is the ideal product for small and medium Pubs Disco Bar etc

The suspension points included in the cabinet offer the possibility of installation both in horizontal and vertical position. The adjustable speaker mount allows the speaker in low ceilings in horizontal position. The asymmetric trapezoidal profile makes it practical also for uses it like small monitor. SP218 can be used in full-range or with sub woofer (ex. SUBDRIVE12 PSUB1). Passive crossover low tollerance with slope 12db/18db and circuit of protection POLISWITCH guarantees elevated pressures and the maximum reliability lasting in time.

The SP218 system is ideal for distributed systems, the 6° per side trapezoid angles match the 60° horizontal coverage pattern allowing the creation of tight packed clusters. It is ideal for sound reinforcement in A/V events The comprehensive system mounting points permit safe suspension in permanent installations.

PHYSICAL DESCRIPTION

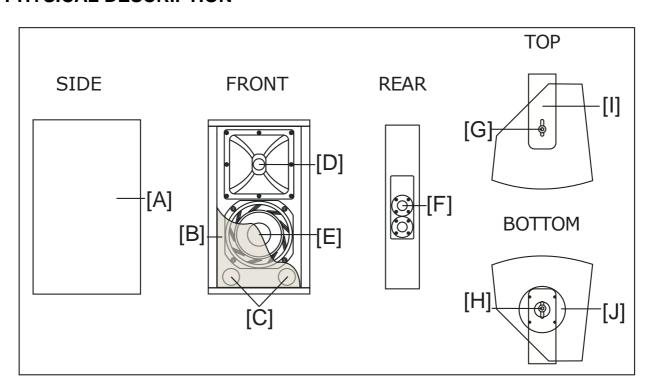

- [A] Enclosure Cabinet
- [B] Steel Protection Grid
- [C] Reflex
- [D] HF Driver
- [E] Woofer

- [F] Connection Panel
- [G] Mounting Nut
- [H] Mounting Nut
- [I] Mounting Bracket
- [J] Adapter for Pole or Bracket

Materials and construction meet the highest professional standards to ensure maximum reliability.

6| Operating Manual ver. SP218-EN-1.0



TECHNICAL SPECIFICATIONS

| | | 11.1.1.1.445.540.0493 | |
|--------------------|------------------------------------|--|--|
| PHYSICAL | | Height 415 [16.34"] | |
| | Dimensions mm (±1 mm) [Inches] | Front Width 240 [9.45"] | |
| | | Rear Width 80 [3.15"] | |
| | | Depth 255 [10.03"] | |
| | Weight Kilograms | Net Weight 6 | |
| | Weight Khograms | Shipping Weight 7 | |
| SYSTEM PERFORMANCE | Frequency Response | ±5 dB 75 Hz ~ 20 KHz | |
| | riequency Response | -10 dB 50Hz | |
| | | Full Range Passive 94 dB | |
| | Sensitivity (1 Watt @ 1 m) | LF 93.5 dB | |
| | | HF 95 dB | |
| | Max SPL Calculated | 118 dB | |
| | Nominal Input Impedance (Ω) | Full Range Passive 8 Ω | |
| | | LF 8 Ω | |
| | | HF 8 Ω | |
| | Power Handling (Watt cont. AES) | Full Range Passive 250 | |
| | | LF 200 | |
| | | HF 50 | |
| | Name in all Biographics (@. 0.1B) | Horizontal 90° | |
| | Nominal Dispersion (@ -6 dB) | Vertical 40 ° | |
| MECHANYCAL | Enclosure material | Birch Plywood of 15 mm [0.59 | |
| | | inches] | |
| | Finish | Texture poliuretanic black paint | |
| | Suspension | 2 Point Mounting Suspension | |
| | <u> </u> | M6, U Bracket System Powder coated perforated steel | |
| | Grille | with anti-dust foam | |
| | Connectors | Neutrik Speakon NL4 | |
| | Optional Accessories | Speaker Soft Bag, Flight Case | |

SP218

INSTALLATION AND WIRING




There are 2 types of SP218 speaker, one right and one left, they are symmetrical.

SP218 speaker can be mounted to the wall using its own bracket or on the floor as monitor.

There are two plates provided with the speaker: one of them must be installed when using a mount pole, the other one must be used when using the mounting bracket to fix it.

The bracket must be fixed to the wall through the fixing holes using plugs suitable to support the weight of the entire apparatus.


Bracket must be secured to the speaker with the screws on top and bottom of the case.

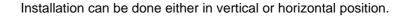


Choose a safe mounting location, so as to prevent the cables can be stepped on or create tripping hazards.

Make sure that the shape and extent of the supporting surfaces are such as to ensure a safe support.



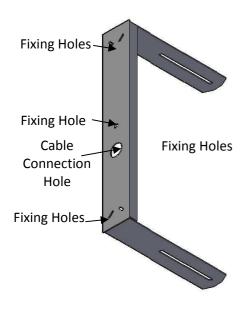

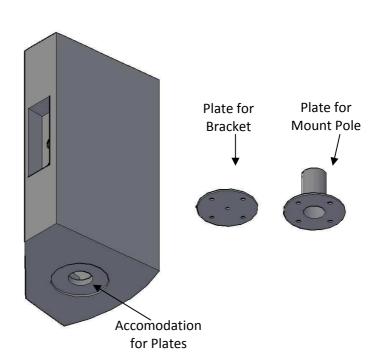

8| Operating Manual ver. SP218-EN-1.0




SERIAL


Before making connections between mixer and speakers, make sure the mixer volume is turned down.


In the connection panel there are two Speakon NL4 connectors referred as 'IN' and 'OUT'.

IN is the input connector and must be connected to the amplifier, 'OUT' is a LINK OUT and can be connected to other systems.

You can now use the system

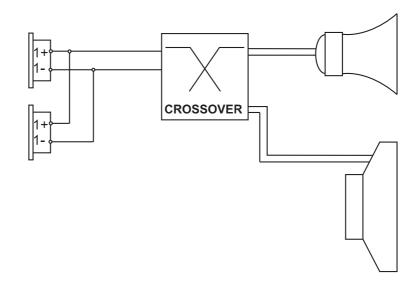

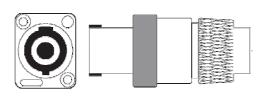

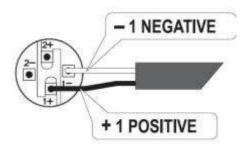

WEEE DIRECTIVE

WEEE Directive

Warning!

The product is marked with this symbol which indicates not to discard electrical and electronic equipment via the normal procedure for disposal of household waste. For these products there is a diverse collection system in accordance with legislation that requires proper treatment, recovery and recycling of used products. For more information please contact the appropriate local authority.

The black bar underneath indicates that the product was placed on the market after 13 August 2005.



For home users

In the European Union

Warning: To dispose of this equipment, do not use the ordinary dust bin! The electrical and electronic equipment must be treated separately and in accordance with legislation that requires proper treatment, recovery and recycling of used products. Following the implementation by member states, private households within the EU can give free electrical and electronic equipment to designated collection facilities *.

In some countries (*), your local retailer may withdraw the old product for free if you purchase a new one of similar type.

In countries outside the EU: please contact your local authorities and ask for the correct method of disposal.

In Switzerland: Used electrical or electronic equipment can be returned free of charge to the dealer, even if you do not purchase a new product.

Further collection facilities are listed on the homepage or www.swico.ch. www.sens.ch.

For professional users

In the European Union

Warning: If the product is used for business purposes, the following steps to delete it:

contact your LSS dealer for information about the product recall.

Might be charged for the costs of collection and recycling. Small products (and amounts) might be taken back by your local collection facilities.

In Spain: contact the established collection system or the local authority for collection of used products.


In countries outside the EU: please contact your local authorities and ask for the correct method of disposal.



^{*} For more information please contact the appropriate local authority.



DIMENSIONS

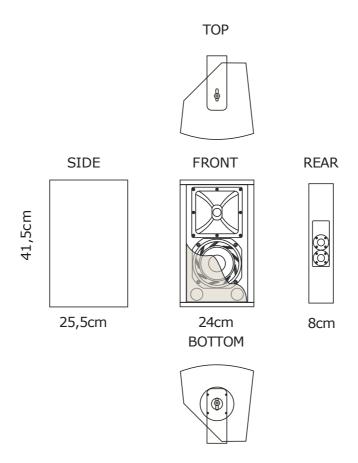

| S | D2 | 1 | Ω |
|-----|----|---|----|
| • > | | • | () |

NOTES





CONTACT INFORMATION:

Via On. Longo 53
89024 Polistena (RC) ITALY
Tel (39) 966 9321299 – Fax (39) 966 933007
Email: info@lss.it - Internet: www.lss.it